

***To keep the entrance mat in good condition, we recommend that you periodically follow the maintenance instructions below. The frequency of the cleaning depends partly on the intensity of the use of the mat and the degree of contamination.***

### **ABI Brushmat**

Regular maintenance	1. Clean the mat with a brush or broom in the direction of the profiles.
Periodic maintenance	<ol style="list-style-type: none"> <li>Carefully remove the mat out of the well. The mat can be rolled up.</li> <li>Clean the mat with a brush or broom in the direction of the profiles.</li> <li>Clean the well / floor with a brush or broom.</li> <li>Vacuum the well / floor.</li> <li>Carefully replace the mat. If the mat is divided into several mat parts, it is important to replace the parts in the same positions.</li> </ol>
Major maintenance	<ol style="list-style-type: none"> <li>Carefully remove the mat out of the well. The mat can be rolled up.</li> <li>Clean the mat with a brush or broom in the direction of the profiles.</li> <li>Clean the well / floor with a brush or broom.</li> <li>Vacuum the well / floor.</li> <li>Clean the well / floor with warm water (possibly with universal cleaning products).</li> <li>Clean the mat with warm water (possibly with universal cleaning products).</li> <li>Allow the well / floor and mat to dry.</li> <li>Carefully replace the mat. If the mat is divided into several mat parts, it is important to replace the parts in the same positions.</li> </ol>

### **ABI Aluflexmat and ABI Alucablemat**

Regular maintenance	1. Vacuum the mat in the direction of the profiles.
Periodic maintenance	<ol style="list-style-type: none"> <li>Carefully remove the mat out of the well. The mat can be rolled up.</li> <li>Vacuum the mat in the direction of the profiles.</li> <li>Clean the well / floor with a brush or broom.</li> <li>Vacuum the well / floor.</li> <li>Carefully replace the mat. If the mat is divided into several mat parts, it is important to replace the parts in the same positions.</li> </ol>
Major maintenance	<ol style="list-style-type: none"> <li>Carefully remove the mat out of the well. The mat can be rolled up.</li> <li>Vacuum the mat in the direction of the profiles</li> <li>Clean the well / floor with a brush or broom.</li> <li>Vacuum the well / floor.</li> <li>Clean the well / floor with warm water (possibly with universal cleaning products).</li> <li>Clean the mat with warm water (possibly with universal cleaning products).</li> <li>Allow the well / floor and mat to dry.</li> <li>Carefully replace the mat. If the mat is divided into several mat parts, it is important to replace the parts in the same positions.</li> </ol>

## ABI Diplomat

Regular maintenance	1. Vacuum the mat in the direction of the profiles.
Periodic maintenance	<ol style="list-style-type: none"> <li>1. Carefully remove the mat out of the well. The mat can not be rolled up.</li> <li>2. Vacuum the mat in the direction of the profiles.</li> <li>3. Clean the well / floor with a brush or broom.</li> <li>4. Vacuum the well / floor.</li> <li>5. Carefully replace the mat. If the mat is divided into several mat parts, it is important to replace the parts in the same positions.</li> <li>6. This mat is reversible, which means that both sides are identical. Taking into account symmetry, it is also possible to place the mats upside-down.</li> </ol>
Major maintenance	<ol style="list-style-type: none"> <li>1. Carefully remove the mat out of the well. The mat can not be rolled up.</li> <li>2. Vacuum the mat in the direction of the profiles.</li> <li>3. Clean the well / floor with a brush or broom.</li> <li>4. Vacuum the well / floor.</li> <li>5. Clean the well / floor with warm water (possibly with universal cleaning products).</li> <li>6. Clean the mat with warm water (possibly with universal cleaning products).</li> <li>7. Allow the well / floor and mat to dry.</li> <li>8. Carefully replace the mat. If the mat is divided into several mat parts, it is important to replace the parts in the same positions.</li> <li>9. This mat is reversible, which means that both sides are identical. Taking into account symmetry, it is also possible to place the mats upside-down.</li> </ol>